



*Pellet Stoves  
Wood Stoves  
Multi-Fuel Stoves  
Pellet Grills*

P.O. Box 206

Monroe, VA 24574

[www.heatredefined.com](http://www.heatredefined.com)

Phone: (800) 516-3636

Fax: (434) 929-4810

## Burn Pot Gasket Replacement

***WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.  
ALWAYS FOLLOW ALL CODES.***


***Be sure the stove is unplugged and cooled before performing any maintenance/component replacement.***

*NOTE: These instructions are also included on the service DVD that came with your unit.*

An airtight seal around the gaskets is crucial to proper stove performance and safety. To replace the burn pot gasket, first remove the burn pot by loosening the two bolts that are located under the ash lip, using a ½" socket or open ended wrench. (Ill. 1)

Pull the burn pot forward, until it clears the end of the feed tube. Then, rotate the burn pot and remove it from the stove.

Scrape any residue or gasket material from the burn pot and the back of the stove's firewall. Install the new gasket *against the firewall of the stove, ensuring that the hole for the igniter (if applicable) is on the proper side* – Igniter is shown in Ill. 2. Reinstall the burn pot and tighten the two bolts, using a ½" socket or open ended wrench. Hold the burn pot firmly against the back wall of the stove and tighten each bolt a little at a time.

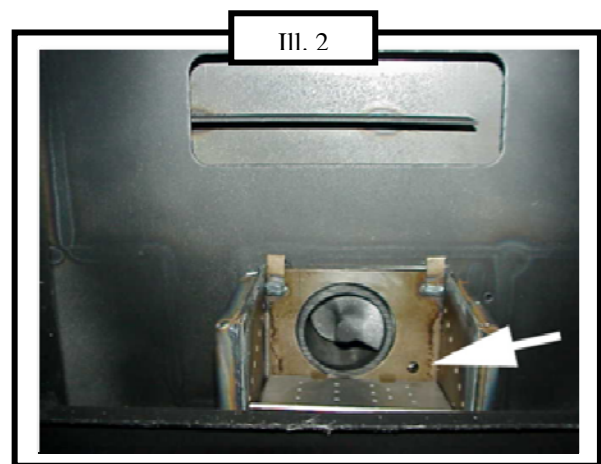

See your owner's manual and service DVD for your specific part number and for more information on checking and replacing gaskets.

*Call Technical Support at (800) 245-6489 with any questions.*