

#### **Packing List**

- Berkshire/Greenfield Mounting Bracket
- Northfield Mounting Bracket
- (2) plastic wire restraint clips
- Blower Assembly
- Wiring Harness
- Rheostat
- Snap Disc
- Rheostat Nut and Knob
- (5) Grommets,
- (5) Nuts

### **Compatibility**

- Berkshire MV
- Greenfield MV
- Northfield MV



Berk/Greenfield



Northfield

#### **Warnings**

**WARNING**: Do not connect 110-120 VAC to the gas control valve or wiring system of this appliance.

**NOTE**: Install the blower prior to connecting the gas line or installing the stove. If using the

GreenSmart™ basic remote, install it after the blower is in place.

#### Installation

1 Disconnect the control box from the right hand, rear corner of the stove by removing the three screws indicated below.




2 Tilt the assembly down being careful not to damage the wires connecting the assembly to the unit. Unscrew the (2) screws on the side of the assembly to remove the heatshield and expose the wiring. Set the screws aside for reinstallation.







3 Install the rheostat shaft into the hole in the control assembly as illustrated below.

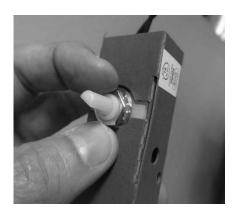



4 Connect the two wires from the Rheostat to the black wires in the control housing. Install the blower control knob and return the assembly to its original configuration.

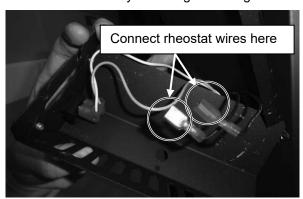


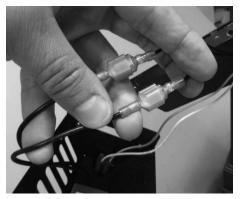







5 Place the blower assembly face down. Press the grommets on the mounting bracket onto studs attached to the blower assembly. Secure the bracket to the assembly using the (5) 3/8" nuts included with the blower kit (do not overtighten – the grommets isolate vibration and should not be fully compressed).

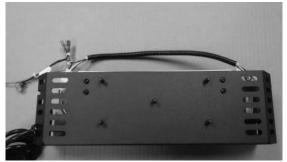

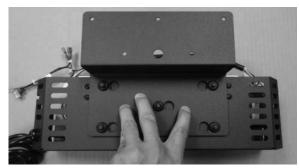




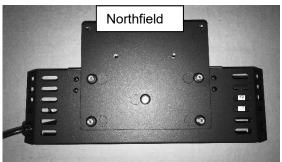


6 Slide the snap disk into the bracket on the bottom of the firebox (facing the front of the stove, the bracket would be on the right).



7 Place the blower assembly on the floor behind the stove close enough that the wires on the assembly can reach the snap disk on the stove. Locate the two black wires on the blower assembly labeled "Snap Disk" and connect them to the terminals on the snap disk (polarity does not matter).

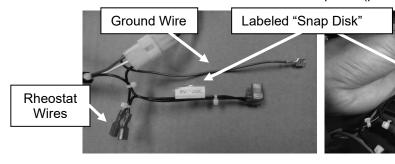

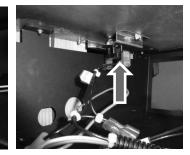




8 Connect the green ground wire to the connector on the belly pan of the unit.





9 Connect the two remaining connectors on the blower assembly harness to the two wires marked "rheostat" that come down from the control box. Insert the two included plastic wire restraints into holes in the floor of the valve area and clip excess wire in place. Make sure no wire will make contact with hot surfaces.



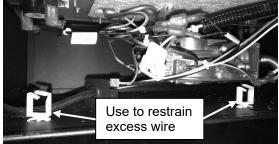

10 Remove the (5) Philips head screws from the back of the stove and used them to attach the mounting bracket to the back the stove.

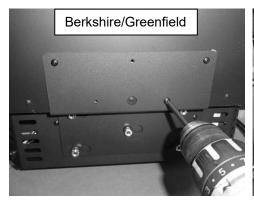

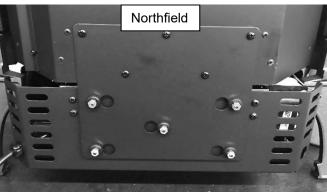

**NOTE:** Make sure that nothing is making contact with the blower impellers and that no wires contact with the bottom of the firebox before powering the blower for the first time.