



# Fan, Cypress / GreenField

## Installation Instructions (sku 99000173)

### Packing List

- Blower Assembly
- Wiring Harness
- Rheostat
- Snap Disc
- Rheostat Nut, Spacer, and Knob

### Installation

**WARNING:** Make sure power to the stove has been shut off prior to installation (Unplug the stove). Do not connect 110-120 VAC to the gas control valve or wiring system of this appliance.

**NOTE:** Install the blower prior to connecting the gas line or installing the stove. If using the Greensmart™ remote, install it after the blower is in place.

- 1 Use pliers to disconnect the cord restraint from the power cord (see Figure 1).

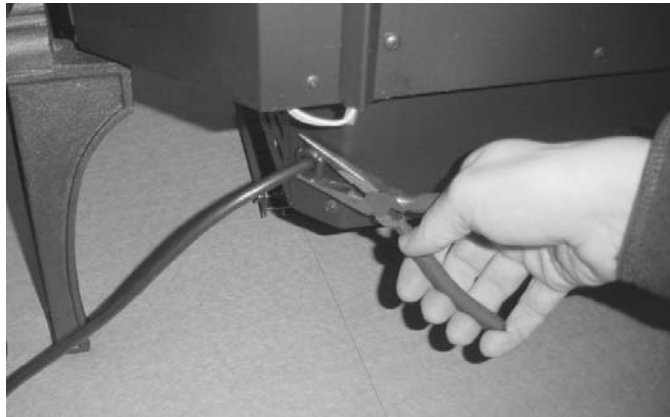


Figure 1

- 2 Remove the seven screws holding the rear cover in place (see Figure 2 and Figure 3). Remove the rear cover and place it directly behind the stove.



Figure 2

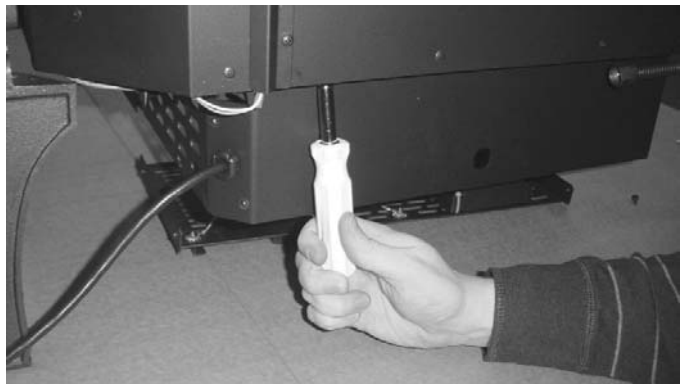


Figure 3



# Fan, Cypress / GreenField Installation Instructions (sku 99000173)

- 3 Disconnect the molex connector from the power cord (see Figure 4). Place the power cord aside. The rear cover may be discarded.

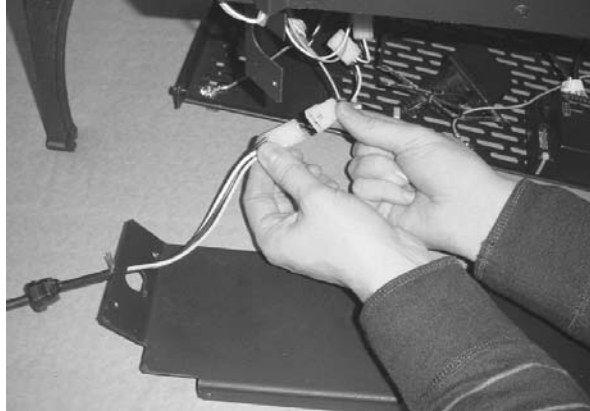


Figure 4

- 4 Remove the cover plate behind the gas control valve (see Figure 5). Attach the included snap disc in this location using the same screws (see Figure 6).

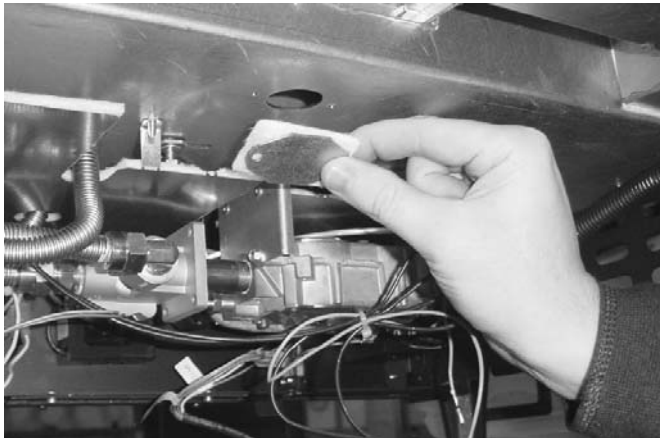


Figure 5

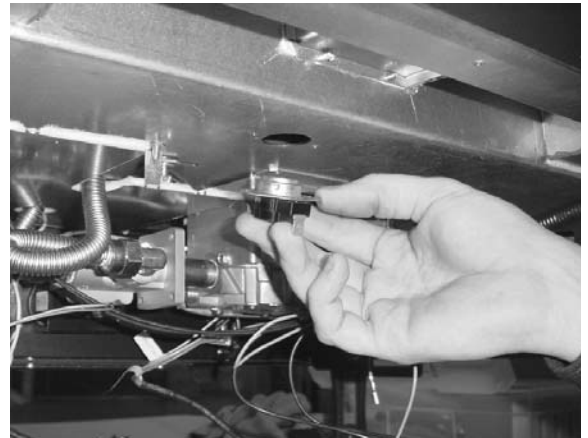


Figure 6

- 5 Place the blower near the back of the stove and attach the two wires on the wiring harness labeled "BLOWER" to the blower (orientation does not matter – see Figure 7). Attach the two wires labeled "SNAP DISC" to the snap disc (orientation does not matter – see Figure 8).

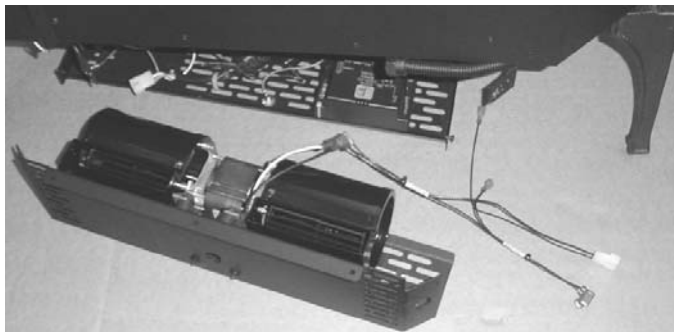


Figure 7

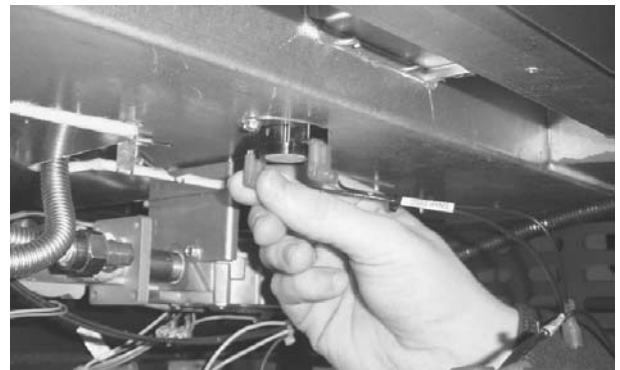


Figure 8



# Fan, Cypress / GreenField

## Installation Instructions (sku 99000173)

- 6 Insert the power cord through the hole on the power housing (see Figure 9). Place the cord restraint over the power cord and press into the hole on the blower assembly, locking the power cord in place (see Figure 10).

**NOTE:** The blower assembly has three hole locations for the power cord power to exit the stove (left, right, and center). Use the hole best suited for your installation.

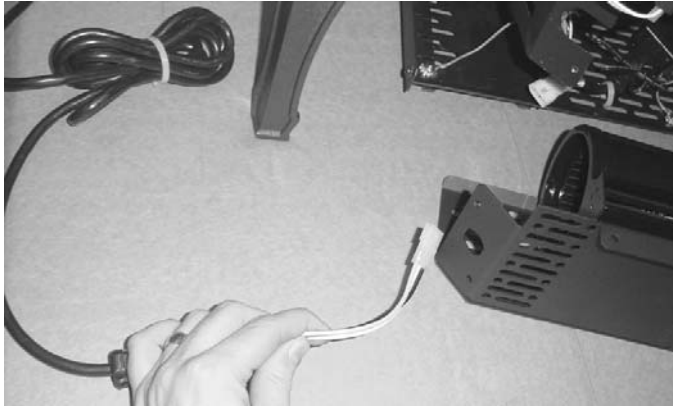


Figure 9

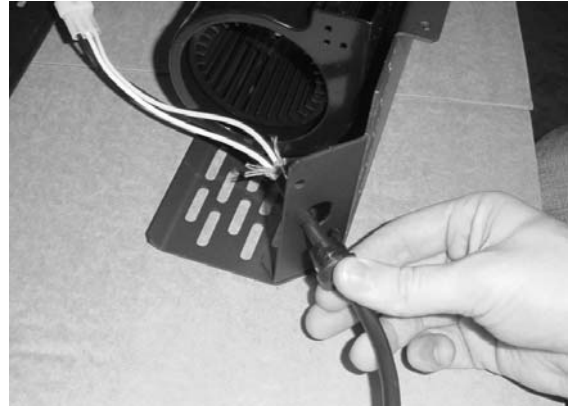


Figure 10

- 7 Attach the moxex from the power cord to the moxex disconnected in step 3 (see Figure 11).



Figure 11



# Fan, Cypress / GreenField Installation Instructions (sku 99000173)

**NOTE:** If using the optional GreenSmart™ remote, follow the directions below to connect the blower wiring harness to the fan control module (ignore steps 8 through 10 for installing the blower rheostat).

- 8 Attach the molex connector on the blower wiring harness to the molex connector on the stove (see Figure 12). Attach the two wires labeled “RHEOSTAT” to the rheostat included with this kit (see Figure 13).

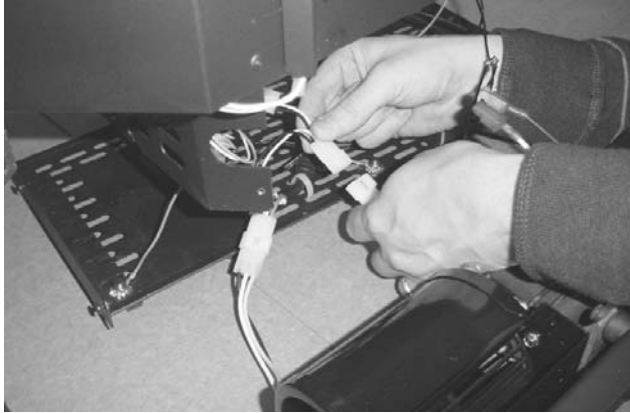


Figure 12



Figure 13

## **Special Instructions for GreenSmart™ Remote**

If using the Greensmart™ remote, the rheostat will be bypassed and the power connected to the fan extension module (see instructions below for details).

**Bypassing the Rheostat** – Disconnect and discard the electrical line that leads from the snap disk to the rheostat (carefully remove the wire tie and “SNAP DISK” label from the wiring harness – see Figure 14 “a”). Attach the lead from the power input to the snap disk (see Figure 14 “b”). Attach the wiring harness molex to the power lead (included with the remote – see Figure 14 “c”). Then plug the power lead into the outlet labeled “FAN” on the fan control module. Disregard the instructions for installing the rheostat (steps 6 through 9) or attaching power to the wiring harness (step 4).

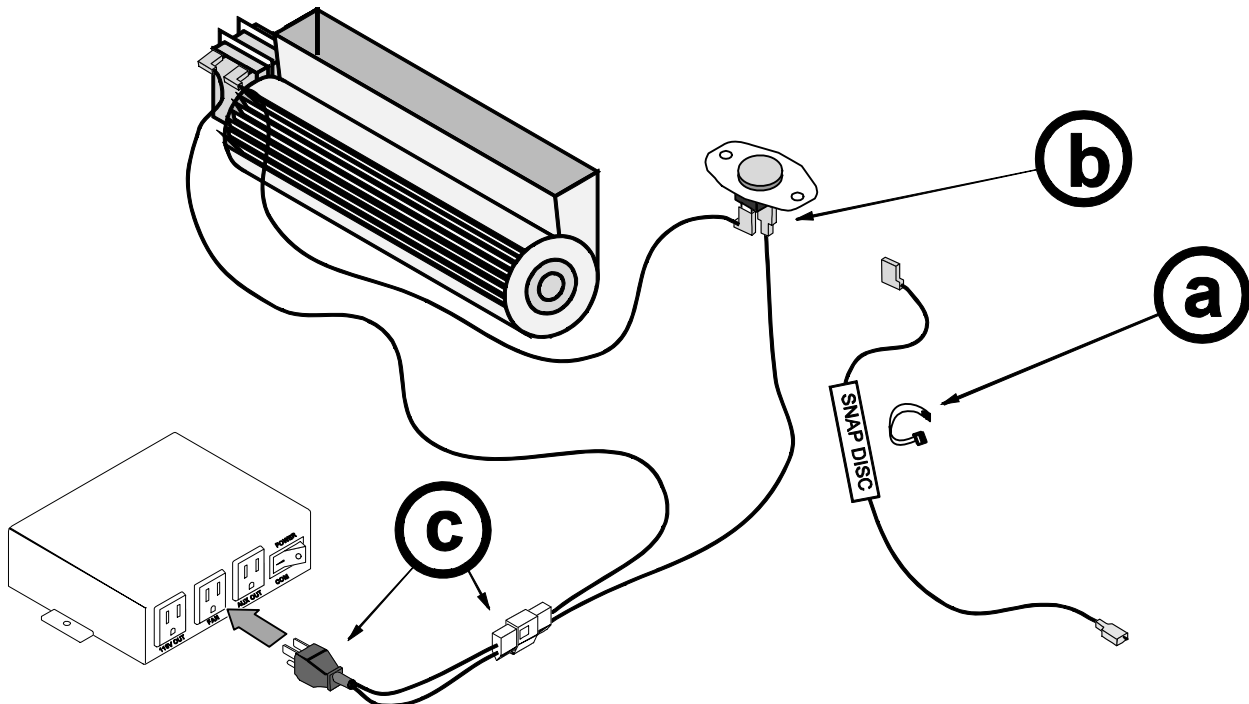


Figure 14



# Fan, Cypress / GreenField Installation Instructions (sku 99000173)

- 9 Remove the four screws holding the control panel in place (see Figure 15). Pull the control panel forward and lay it face down (see Figure 16).

**NOTE:** Remove the battery trays before removing the control panel.

**WARNING:** Take care to prevent scratching the control panel door (use cardboard or paper).



Figure 15



Figure 16

- 10 Carefully route the rheostat under the firebox to a location near the control panel (route the wires under the components to prevent wiring from contacting the hot firebox floor). Insert the spacer onto the rheostat shaft and insert it into the hole next to the accent light rheostat (see Figure 17). Make sure the orientation-tab on the rheostat lines up with the orientation-hole on in the control panel. Use the included press-nut to secure the rheostat to the control panel (see Figure 18). Carefully replace the control panel, making sure wires do not pinch, and attach with the four screws removed in step 9. Place the rheostat knob on the rheostat.



Figure 17



Figure 18

- 11 Before attaching the blower assembly, verify all wiring is secure and does not contact any moving or hot surfaces. Use wire ties, if necessary, to secure the wiring. Attach the blower assembly using the screws removed in step 2 (see Figure 19) and return the stove to the correct configuration.



Figure 19